

WARRANTY INFORMATION

SERVICE INSTRUCTIONS

1. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.
2. If you have any questions regarding this unit's operation or believe any repair is necessary, please write to our Consumer Service Department.
3. If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store where you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed warranty.
4. If you have any other questions or comments, see our correspondence below or visit our website at **www.holmesproducts.com**.

JCS/THG, LLC
13120 JURUPA AVENUE
FONTANA, CA 92337

For your own records, staple or attach your sales receipt to this manual. Also, please take a moment to write the store name/location and date purchase below.

STORE NAME: _____

LOCATION: _____

DATE PURCHASED: _____

(STAPLE RECEIPT HERE)

© 2006 JCS/THG, LLC

Holmes® and the Holmes logo® are registered trademarks of JCS/THG, LLC.

WARRANTY INFORMATION

ONE (1) YEAR LIMITED WARRANTY

SAVE THIS WARRANTY INFORMATION

- A. This Warranty applies only to the original purchaser of this product.
- B. This Warranty applies **ONLY** to repair or replacement of any supplied or manufactured parts of this product that, upon inspection by JCS/THG, LLC authorized personnel, is shown to have failed in normal use due to defects in material or workmanship. JCS/THG, LLC will determine whether to repair or replace the unit. This Warranty does not apply to installation expenses.
- C. Operating this unit under conditions other than those recommended or at voltages other than the voltage indicated on the unit, or attempting to service or modify the unit, will render this WARRANTY VOID.
- D. Unless otherwise proscribed by law, JCS/THG, LLC shall not be liable for any personal injury, property or any incidental or consequential damage of any kind resulting from malfunctions, defects, misuse, improper installation or alteration of this product.**
- E. All parts of this product excluding filters, which are covered under separate warranty, are guaranteed for a period of 1 year as follows:
1. Within the first 30 days from date of purchase, the store from which you purchased your product should replace this product if it is defective in material or workmanship (provided the store has in-stock replacement.) If you intend to assert any claim in connection with the product, please follow the instructions in paragraph F.
 2. Within the first 12 months from date of purchase, JCS/THG, LLC will repair or replace the product if it is defective in material or workmanship, subject to the conditions in paragraph G.
- F. If you have any other problem or claim in connection with this product, please write to our Consumer Service Department.
- G. **IMPORTANT RETURN INSTRUCTIONS.** Your Warranty depends on your following these instructions if you are returning the unit to JCS/THG, LLC:
1. Carefully pack the item in its original carton or other suitable box to avoid damage in shipping.
 2. Before packing your unit for return, be sure to enclose:
 - a) Your name, full address with zip code and telephone number
 - b) A dated sales receipt or PROOF OF PURCHASE,
 - c) Your \$5.00 check for return shipping and handling, and
 - d) The model number of the unit and the problem you are having. (Enclose in an envelope and tape directly to the unit before the box is sealed.)
 3. JCS/THG, LLC recommends you ship the package U.P.S. ground service for tracking purposes.
 4. All shipping charges must be prepaid by you.
 5. Mark the outside of your package:

HOLMES
JCS/THG, LLC
13120 JURUPA AVENUE
FONTANA, CA 92337

SHIPPING AND HANDLING CHARGES: \$5.00 (USD)

This Warranty gives you specific legal rights, and you may have other rights which vary from state to state. The provisions of this Warranty are in addition to, and not a modification of, or subtraction from, the statutory warranties and other rights and remedies contained in any applicable legislation. To the extent that any provision of this Warranty is inconsistent with any applicable law, such provision shall be deemed voided or amended, as necessary, to comply with such law.

9100020005937

HFH110/111/111T/WF11006EM1

Printed In China

Holmes®

Owner's Guide

HFH110/HFH111/HFH111T/WF110



HFH110 Shown

Compact Heater Fan

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. To avoid fire or shock hazard, plug the appliance directly into a 120V AC electrical outlet.
3. The heater is hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 ft (0.9 m) from the front of the heater and keep them away from the sides and rear.
4. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
5. This heater is not intended for use in bathrooms, laundry areas and similar indoor location. NEVER locate heater where it may fall into a bathtub or other water container.
6. Extreme caution is necessary when any heater is used by, or near children or invalids, and whenever the heater is left operating and unattended.
7. Always unplug the heater when not in use.
8. When unplugging, be sure to pull by the plug and not the cord.
9. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
10. DO NOT operate heater with a damaged cord or plug, or after the heater malfunctions, has been dropped or damaged in any manner. Return appliance to manufacturer for examination, electrical or mechanical adjustment, or repair.
11. A heater has hot and arcing or sparking parts inside. DO NOT use it in areas where gasoline, paint, or flammable liquids are used or stored.
12. Use appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by The Holmes Group may cause hazards.
13. DO NOT use outdoors.
14. To prevent a possible fire, DO NOT block air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
15. To disconnect heater, turn controls to OFF, then remove plug from outlet.
16. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 14 AWG minimum size and rated not less than 1875 watts.
17. If the heater will not operate, see specific instructions on Auto Safety Shut-off.
18. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.
19. Discontinue use if plug or outlet is hot. It is recommended that the outlet be replaced if plug or outlet is hot to touch.

THIS PRODUCT IS EQUIPPED WITH A POLARIZED PLUG (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact qualified personnel to install the proper outlet.

**DO NOT DEFEAT THE SAFETY PURPOSE OF THIS
POLARIZED PLUG IN ANY WAY**

FEATURES - OPERATIONS

Thank you for purchasing this Holmes® product. We understand the value of quality and are committed to making superior products that stand the test of time. We trust this product will exceed your expectations of quality and reliability. We hope that you enjoy this product and will consider purchasing another Holmes® product in the future.

To see our full product line or if you have any questions or comments about this product, please visit our website at: www.holmesproducts.com.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

TECHNICAL SPECIFICATIONS

- Wattage: 1500W (+5% -15%)
- Working voltage: 120V AC/60Hz

AUTO SAFETY SHUT-OFF WITH CERAMIC CONTROL

This heater is equipped with a patented, technologically advanced, safety system that requires the user to reset the heater if there is a potential overheat situation. When a potential overheat temperature is reached, the system will automatically shut the heater off. It can only resume operation when the user resets the unit. For specific reset instructions please refer to the unit.

Tip-over Shut-off (for HFH111T only):

When the unit is accidentally knocked over, it will shut off. To reset, simply place the heater in an upright position on a level surface.

To Reset the Heater (for HFH110 and WF110 only):

1. Turn MODE to OFF.
2. Unplug unit, wait 10 minutes.
3. Plug in again and turn ON.

To Reset the Heater (for HFH111 and HFH111T only):

If the unit shuts down:

1. Turn MODE to OFF and THERMOSTAT to HI.
2. Unplug unit, wait 10 minutes.
3. Plug in and turn ON.

PRE-OPERATING INSTRUCTIONS

1. Carefully remove your heater from the box. Please save the carton for off-season storage.
2. Make sure the unit is in the OFF position before plugging the heater into the outlet.
3. Place heater on firm level surface.
4. Avoid overloading your circuit by not using other high wattage appliances in the same outlet.

OPERATING INSTRUCTIONS

1. Turn the Selector Control to desired heat setting LO or HI.
2. For fan-only operation, without any heat output, turn the Selector Control to the FAN setting.
3. The Power Light will remain lit during operation.

SETTING THE THERMOSTAT (FOR HFH111 AND HFH111T ONLY)

1. You need to set thermostat on HI to start heater (See fig. #1). Allow heater to operate and warm up the room.
2. When the desired temperature/comfort level is reached, lower the thermostat setting until the fan/heater stops operating.
3. The control will now automatically maintain the pre-set temperature level by turning the heater ON and OFF.

NOTE: It is normal for the heater to cycle ON and OFF as it maintains the preset temperature. To prevent the unit from cycling, you need to raise the thermostat setting.

FEATURES - OPERATIONS

CLEANING/MAINTENANCE

- Always unplug the heater before cleaning.
- Lightly run a vacuum cleaner nozzle over the heater grill to remove any dust or dirt that may have accumulated.
- Carefully wipe the heater with a soft, damp cloth. Please be very cautious near the motor and heating elements.
- NEVER use abrasive or flammable solvents to clean the heater.
- After cleaning, be sure to completely dry the heater with a cloth or towel.
- Store your heater in its original carton in a cool, dry location.

TROUBLESHOOTING

If your heater fails to operate, unplug the heater and:

- Make sure the electrical outlet and circuit breaker are working.
- Check for obstructions. If you find an obstruction, turn OFF and UNPLUG the heater. Carefully remove the obstruction and follow the reset instructions.
- Check the thermostat setting; it might be set too low. Turn the thermostat dial clockwise until the heater restarts.
- Make sure the Mode Control is in Lo or Hi setting.

Please DO NOT attempt to open or repair the heater.

Please see the Warranty for Service Instructions or call our Consumer Services Department at 1-800-5-HOLMES.

ILLUSTRATIONS

Figure 1

for HFH110 & WF110

- A. Carry Handle (not shown)
- B. Selector Control
- C. Power Light



Figure 2

for HFH111 & HFH111T

- A. Power Light
- B. Mode Control
- C. Thermostat Control
- D. Carry Handle (not shown)

